

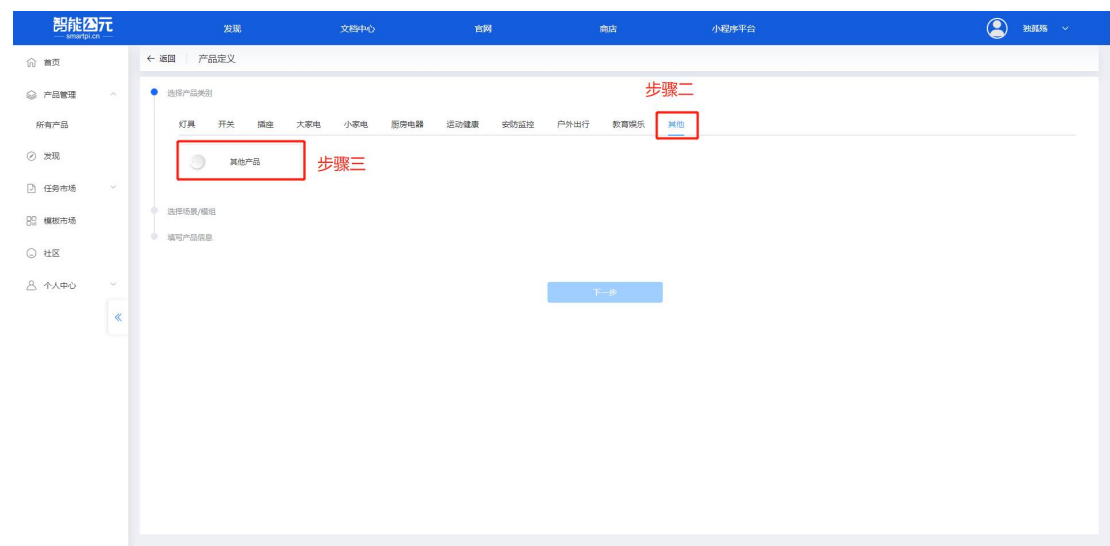
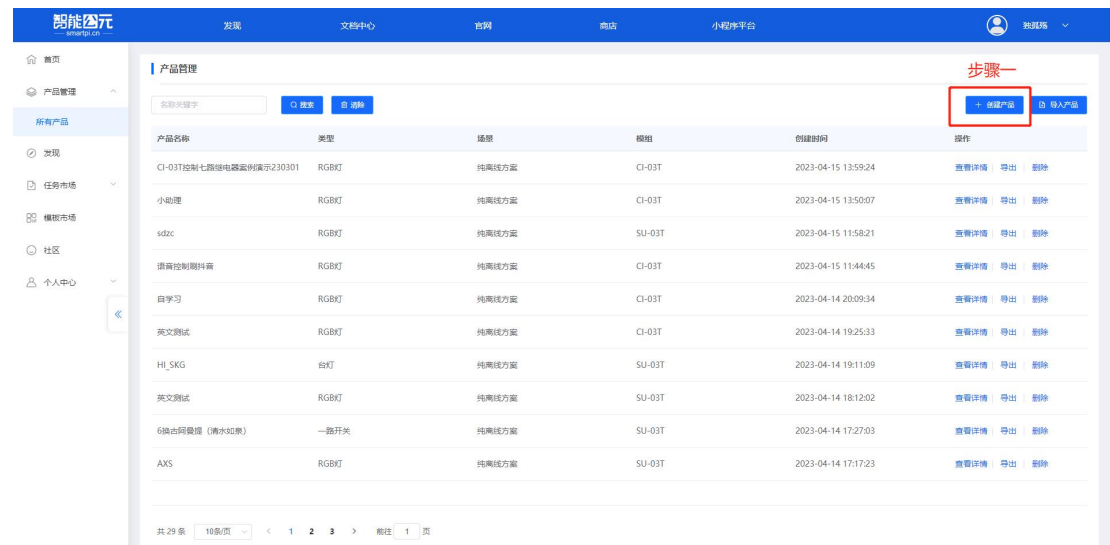
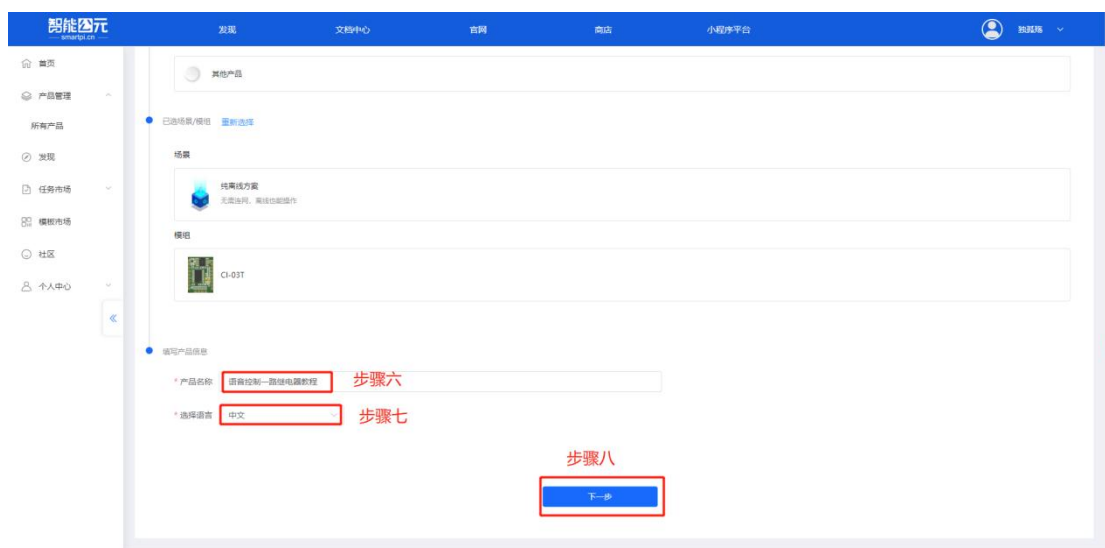



语音控制一路继电器教程




固件配置网站（智能公元）：<http://smartpi.cn/#/>



一、固件配置

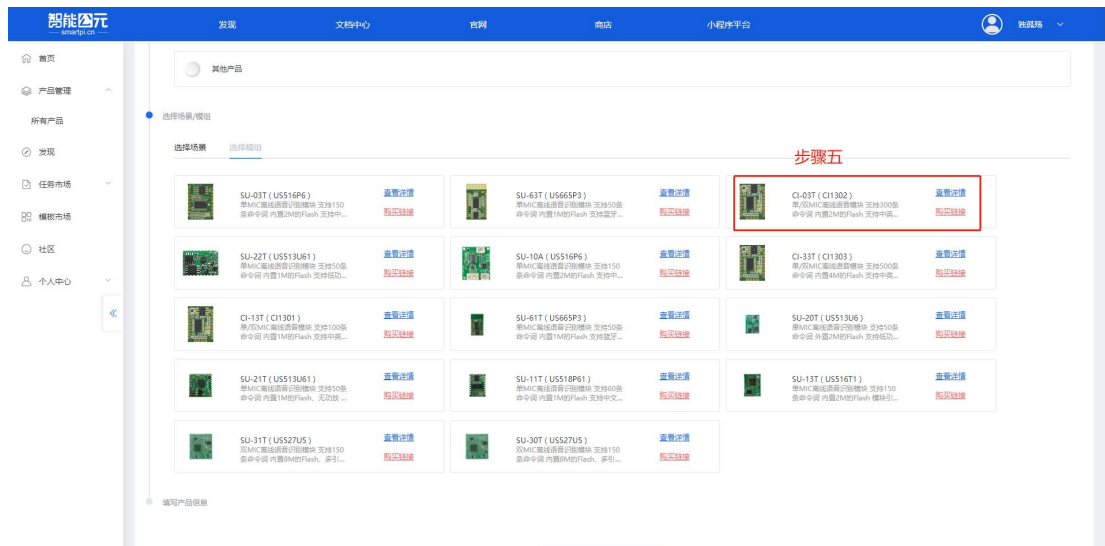

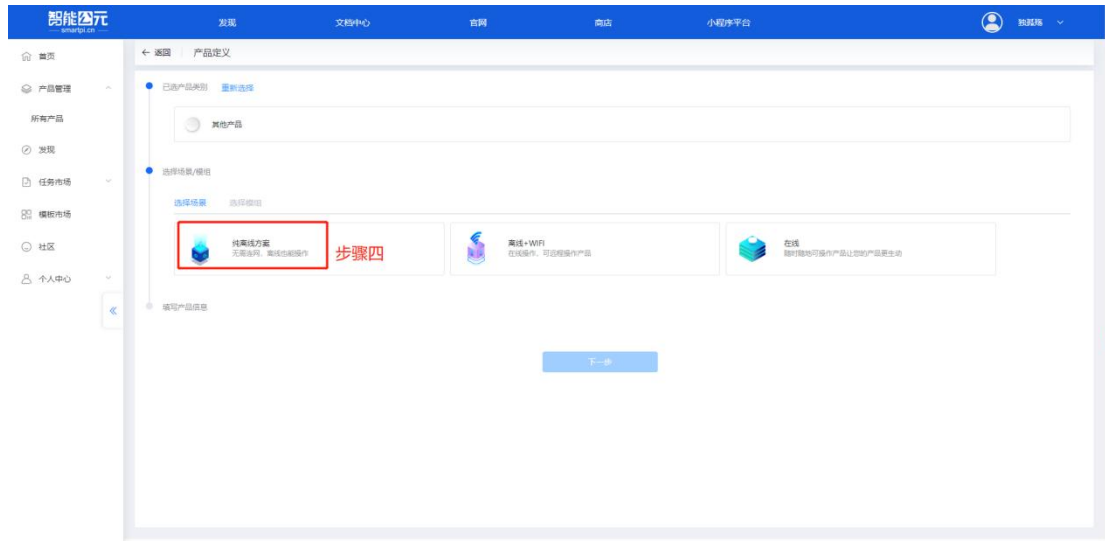


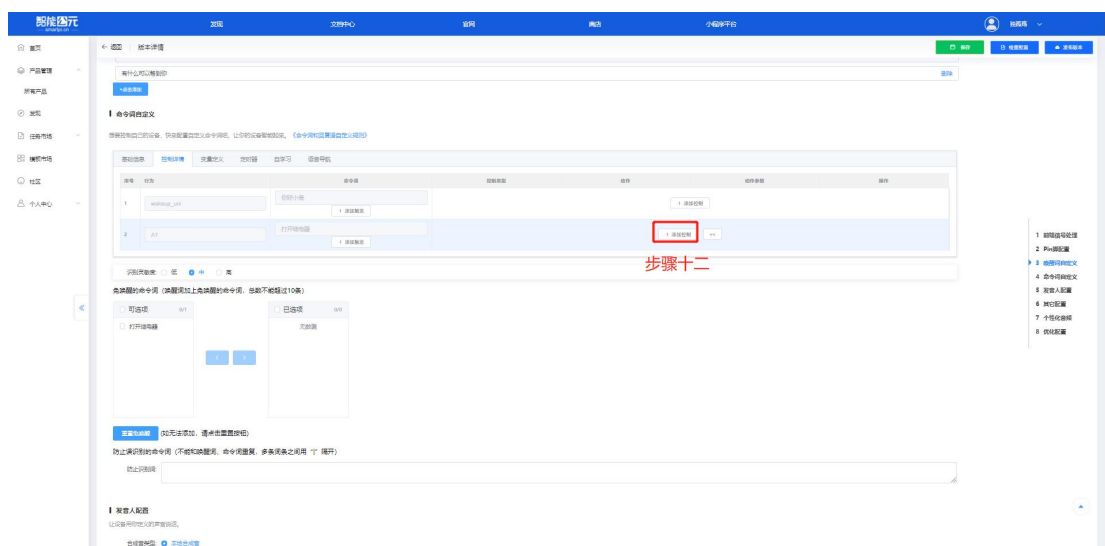


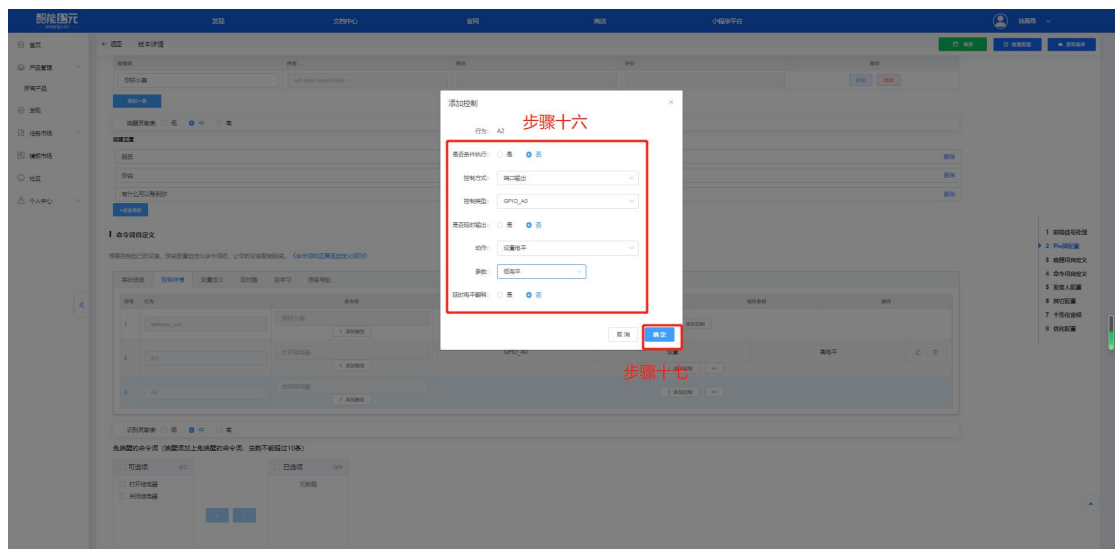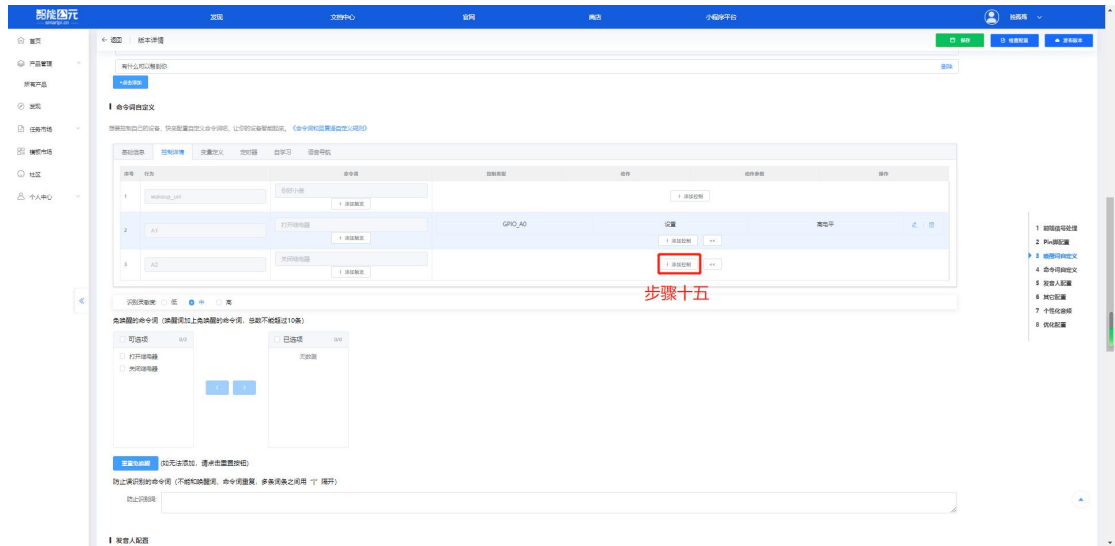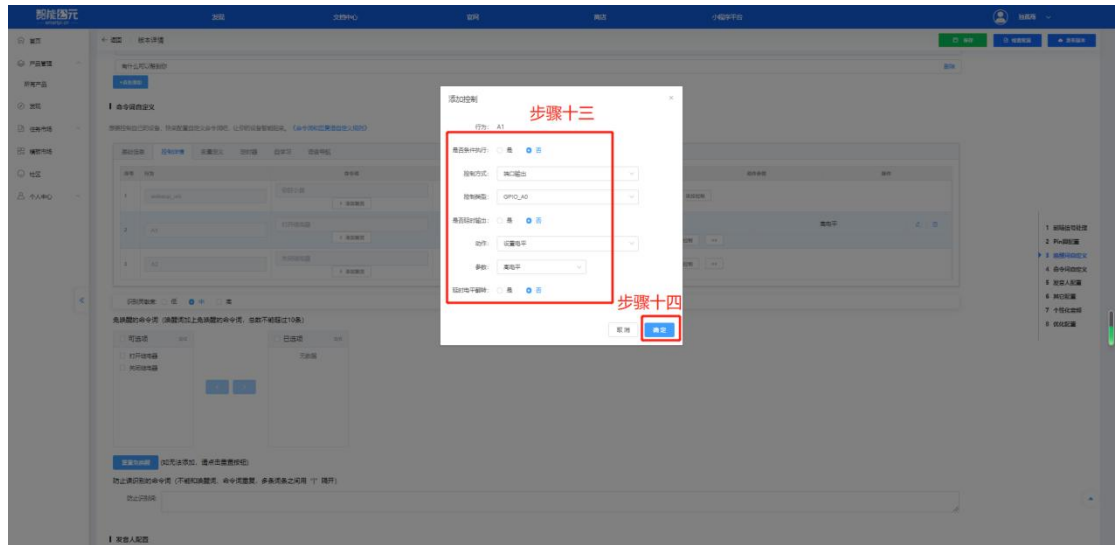

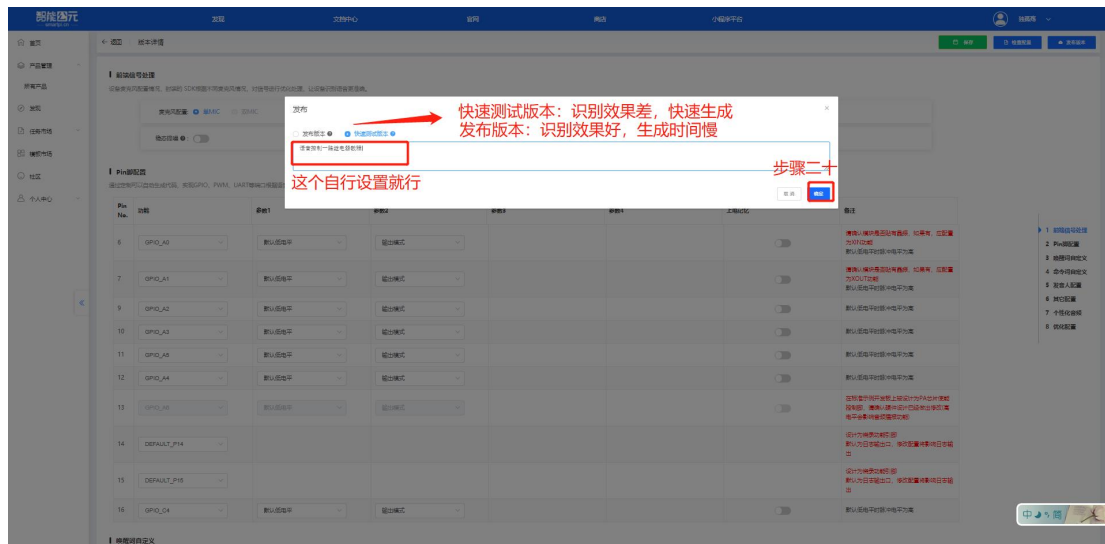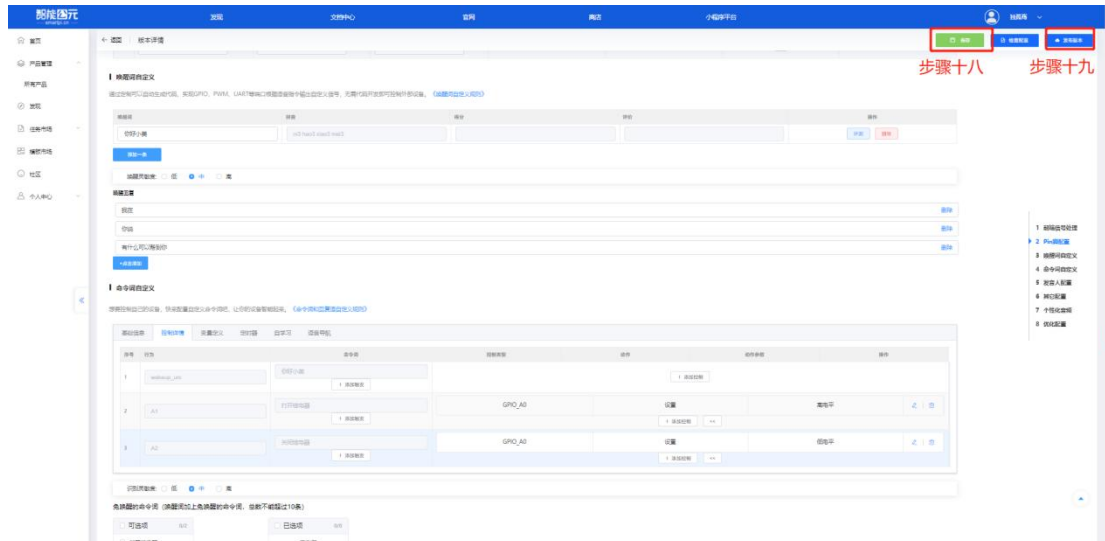

二、固件和烧录软件下载

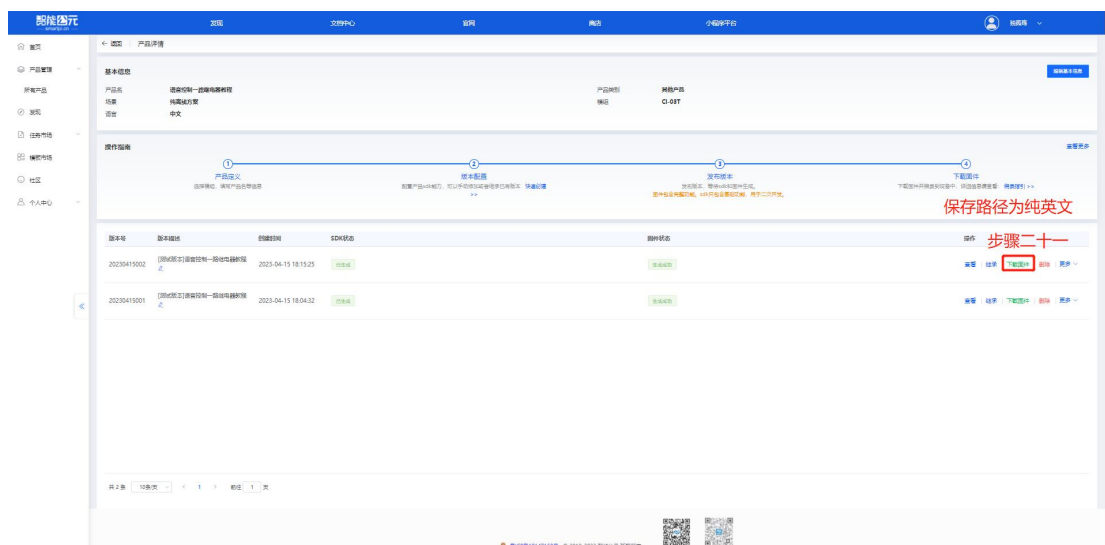


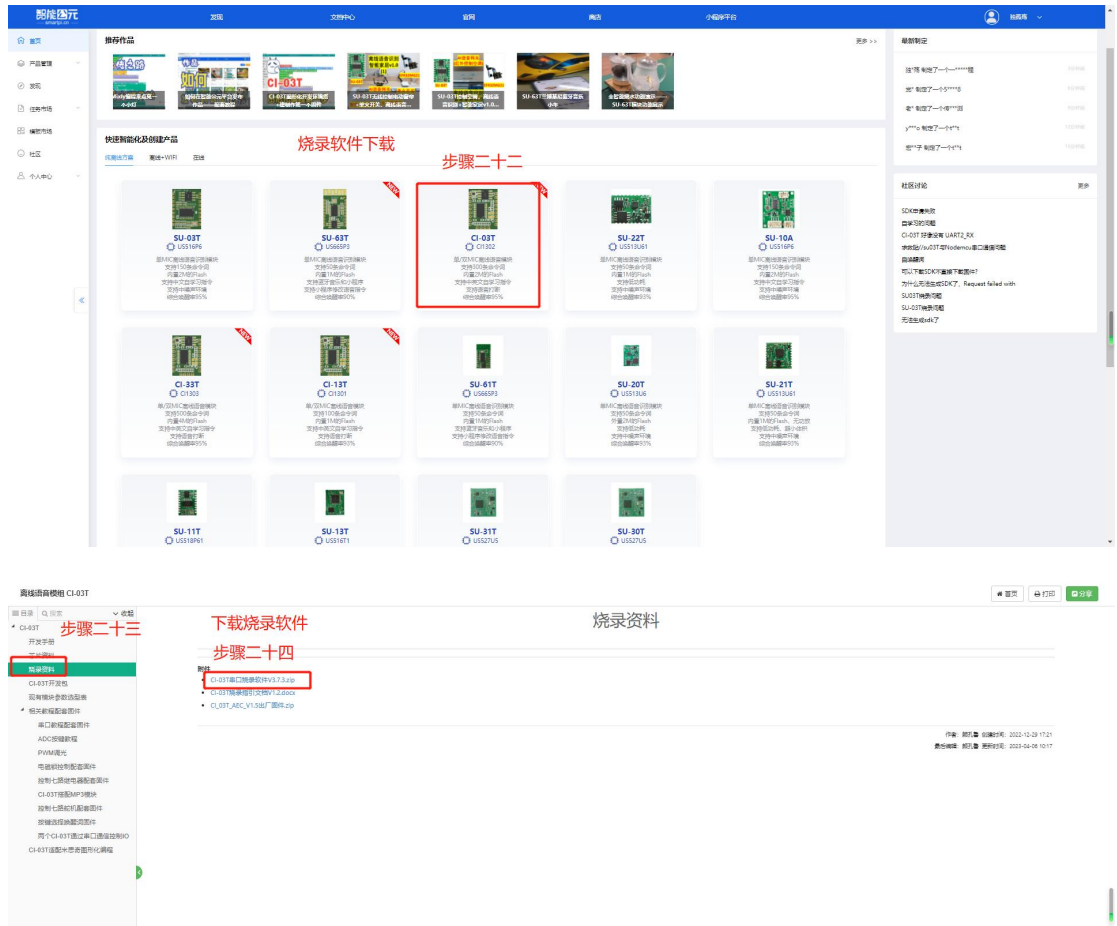

三、固件烧录


名称	修改日期	类型	大小
authentication_file	2023/4/14 11:26	文件夹	
build-tools	2023/4/14 11:26	文件夹	
ci-tool-1.1.2.vsix	2022/12/23 10:04	VSIX 文件	150 KB
ci-tool-kit	2022/12/23 10:04	文件	7,664 KB
ci-tool-kit	2022/12/23 10:04	应用程序	7,011 KB
code_program	2022/12/23 10:04	应用程序	74 KB
common.lds	2022/12/23 10:04	LDS 文件	1 KB
config	2023/4/15 21:00	配置设置	1 KB
generate_makefile.lua	2022/12/23 10:04	LUA 文件	4 KB
lame	2022/12/23 10:04	文件	497 KB
lame	2022/12/23 10:04	应用程序	803 KB
libmp3lame.dll	2022/12/23 10:04	应用程序扩展	671 KB
libmpg123-0.dll	2022/12/23 10:04	应用程序扩展	539 KB
MediaInfo.dll	2022/12/23 10:04	应用程序扩展	5,241 KB
PACK_UPDATE_TOOL	2022/12/23 10:04	应用程序	8,755 KB

步骤二十五：解压下载的烧录软件并打开后打开

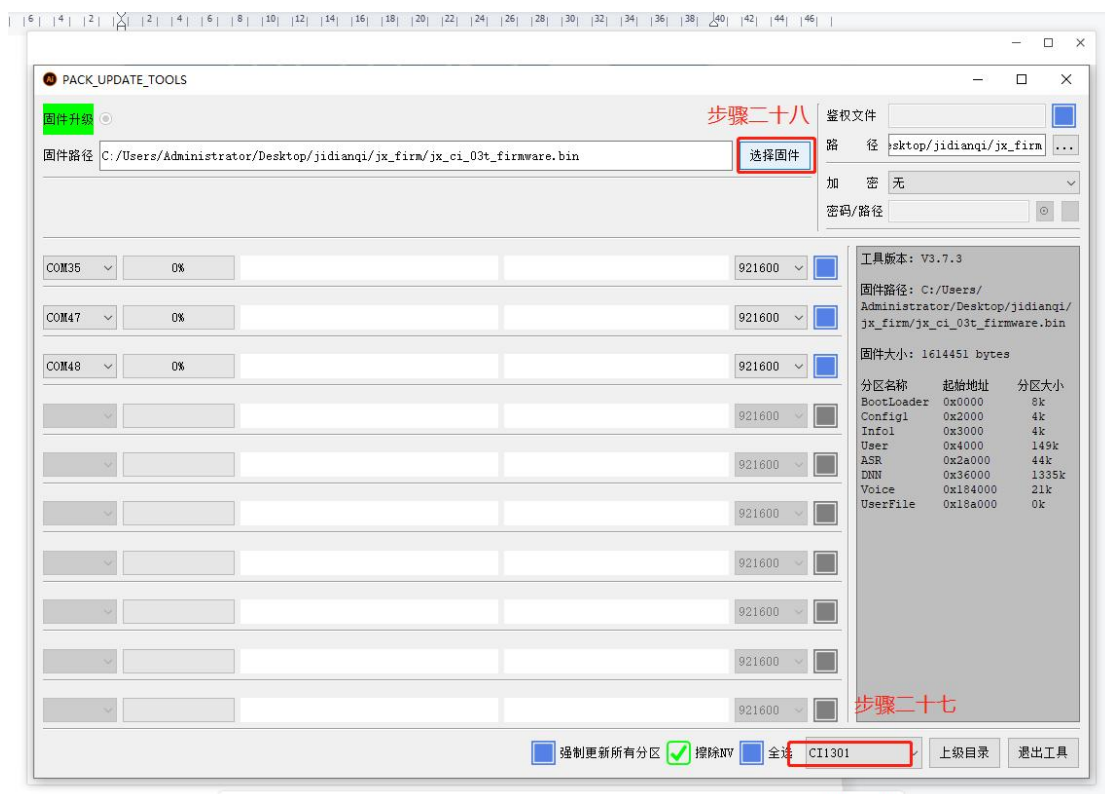

名称	修改日期	类型	大小
uart	2023/4/17 10:35	文件夹	
jx_ci_03t_firmware.bin	2023/4/17 10:28	BIN 文件	1,577 KB

步骤二十九

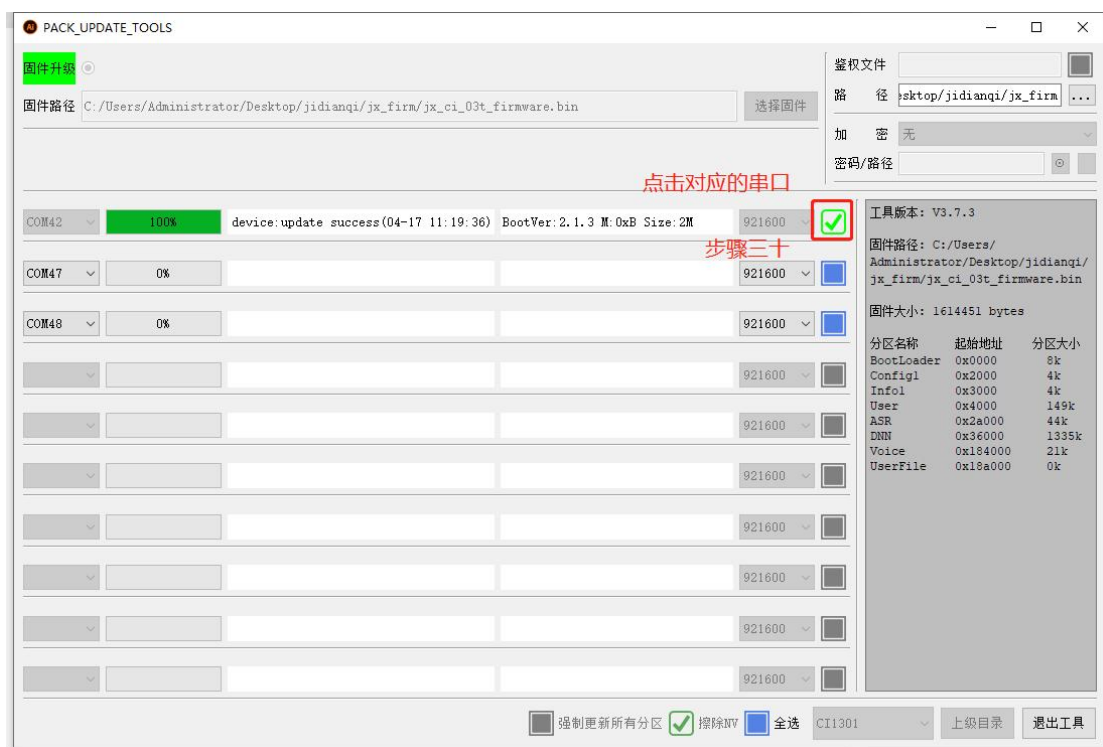

三、实物接线测试

继电器: VCC 接 CI-03T 3.3V
 GND 接 CI-03T GND
 IN 接 CI-03T A0(根据你设置的引脚来定)